

PH 700

PIEZA N°	CÓDIGO	DESCRIPCIÓN	MODELO	CANT.X MAQ.
1	312002	PUNTERA GOMA PH700	PH700	1
2	312004	ANILLO RETENCION PH700	PH700	1
3	312006	CAPERUZA PLASTICA PH700	PH700	1
4	312007	BOLILLA CABEZAL PH700	PH700	2
5	320002	BUJE FIJADOR BOLILLA PH700	PH700	1
6	317002	ARAND.FIJA BOLILLA PH700	PH700	1
7	321002	RESORTE CABEZAL PH700	PH700	1
8	301002	TORN.CABEZAL PH700	PH700	4
9	317003	ARAND.ESTRELLA PH700	PH700	4
10	310002	CABEZAL PH700	PH700	1
11	312008	PALANCA ACC.PERCUSION PH700	PH700	1
12	320003	BUJE CABEZAL PH700	PH700	1
13	327001	RETEN CABEZAL PH700	PH700	1
14	002103	ROD.AGUJAS CABEZAL PH700	PH700	1
15	317004	ANILLO RETENCION BOQ.PH700	PH700	1
16	317005	ARAND.RETENCION BOQUILLA PH700	PH700	1
17	321003	RESORTE EMBRAGUE PH700	PH700	1
18	304002	ENG.SALIDA C/EMBRAGUE PH700	PH700	1
19	303001	EJE PORTAHERRAMIENTA PH700	PH700	1
20	312009	CAMISA CABEZAL PH700	PH700	1
21	303002	EJE GOLPE PH700	PH700	1
22	320004	CASQUILLO INTERIOR PH700	PH700	1
23	327002	ORING EMBOLO INT.N°1 PH700	PH700	1
24/25	327003	ORING EMBOLO INT.N°2 PH700	PH700	2
26	320005	CASQUILLO EXTERIOR PH700	PH700	1
27	317006	SEGURO CASQUILLO PH700	PH700	1
28	327004	ORING EMBOLO EXT.PH700	PH700	1
29	312010	EMBOLO GOLPE PH700	PH700	1
30	312011	CAMISA CILINDRO PH700	PH700	1
31	317007	ARAND.PERNO PH700	PH700	2
32	303003	PERNO PERCUSION PH700	PH700	1
33	327005	JUNTA PH700	PH700	1
34	310010	BRIDA INTERMEDIA PH700	PH700	1
35	320006	CASQUILLO PORTAROD.PH700	PH700	1
36	327006	ORING CASQUILLO PORTAR.PH700	PH700	1
37	302004	GRAPO DINA EJE INTERMED.PH700	PH700	1
38	317008	ARAND.APOYO INTERMED.PH700	PH700	1
39	303004	PERNO EJE INTERMED.PH700	PH700	1
40	321004	RESORTE PH700	PH700	1
41	304004	PIÑON INTERMED.PH700	PH700	1
42	312012	BOLILLA EJE INTERMEDIARIO PH700	PH700	1
43	302005	ROD.DESCENTRADO PERC.PH700	PH700	1
44	304005	ENG.INTERMED.PH700	PH700	1
45	302006	ROD.ENG.INTERMEDIO PH700	PH700	1
46	321005	RESORTE ACOPLE PERCUSION PH700	PH700	1
47A	306002	ROTOR C/VENT.PH700	PH700	1
47B	313002	VENTILADOR PH700	PH700	1
48	311002	DEFLECTOR PH700	PH700	1
49	002010	ROD.ROT.TRASERO PH700 (629)	PH700	1
50	312013	PROTECTOR ROD.PH700	PH700	1
51	002004	ROD.TRASERO PH700 (608)	PH700	1
52	025104	CUBETA TRASERA PH700	PH700	1
53	305002	ESTATOR PH700	PH700	1
54	307002	CUERPO MOTOR PH700	PH700	1
55	315002	ESCOBILLA (JUEGO) PH700	PH700	2

56	316002	PORTA ESCOBILLA PH700	PH700	2
57	301003	TORN.PORTA ESCOBILLA PH700	PH700	4
58	313015	CAPACITOR PH700	PH700	1
59	314002	INTERRUPTOR PH700	PH700	1
60	301004	TORNILLO PH700	PH700	2
62	308002	TAPA MANGO PH700	PH700	1
63	301005	TORN.TAPA MANGO INF. PH700	PH700	2
64	301006	TORN.TAPA MANGO SUP. PH700	PH700	1
65	312014	BOQ.PASACABLE PH700	PH700	1
66	319002	CABLE SALIDA PH700	PH700	1
67-74	326004	MANGO AUX.C/VARILLA PH700	PH700	

PH 700_Explosión

